


Brief operating instructions

TopTronic® E control module easy for comfort ventilation

Hoval

Responsibility for energy and environment

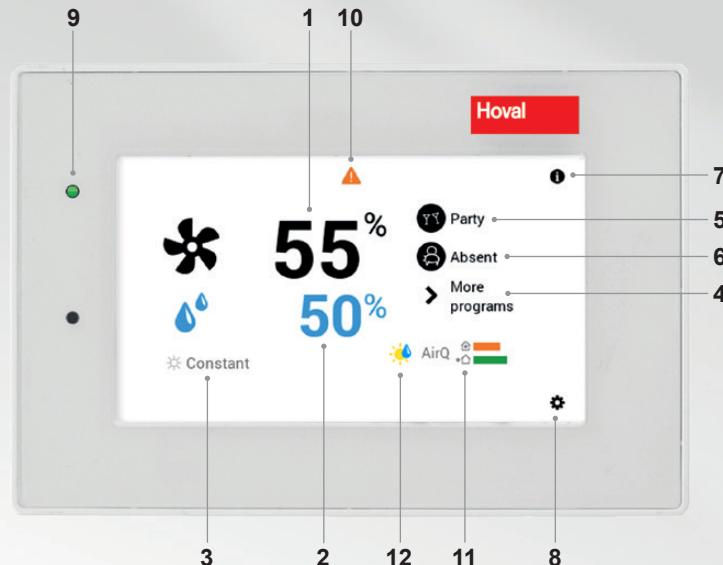


Operating elements/buttons are shown in white on a black background or in black on a white background. Display elements, on the other hand, are shown in colour.

No.	Icon	Designation/function	No.	Icon	Designation/function
1		55 % Required air quantity Can be overridden.	8		Main menu Menu overview and processing of all functions (page 4).
2		50 % Max. air humidity	9		LED operating status Green: operation Orange: filter change Red: lockout, see item 10
3		Constant Active basic program	10		Alarm message display Selection and display of alarm messages. Only visible in the event of an alarm.
4		More programs (Standby, Holiday until, Constant, Eco mode, etc. – page 2)	11		Air quality (optional) If air quality sensor(s) are installed, the interior or exterior air quality is displayed. The air quality can have an impact on the air quantity.
5		Party Increases the air quantity over a desired time period.	12		Air quantity modulation The set air quantity is modulated by the prevailing ambient conditions. However, the air quantity display remains at the set value.
6		Absent Reduces the air quantity over a desired time period.			
7		Information area			


Setting the air quantity (and max. air humidity)



Press "air quantity" or "max. rel. humidity".

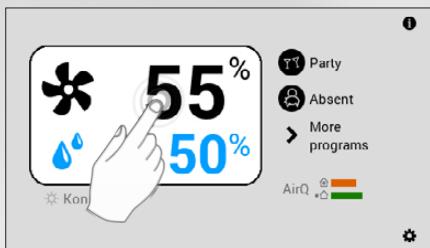

Adjust the air quantity and max. air humidity using (+/-) or by entering directly (tap the value) and confirm with OK.

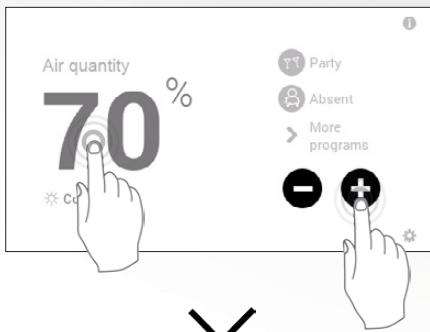


The air quantity rises/falls.




The air quantity or limit value for max. air humidity rise/fall to the required value.

Basic programs

 (Holiday until, Standby, Week 1, etc.)




Select "More programs".

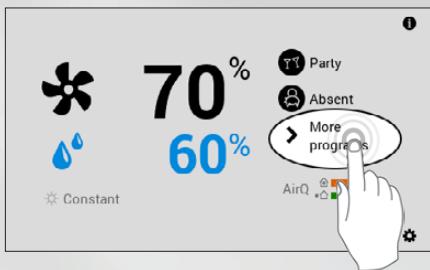

Select required basic program.




Adjust the desired air quantity using (+/-) or by entering directly (tap the value) and confirm with OK. The new basic program is now active.

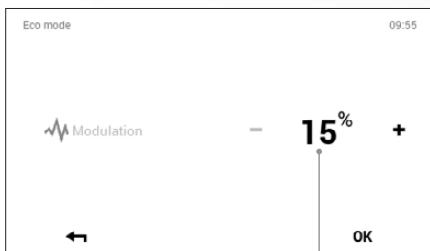

Party, Absent



Select Party or Absent.

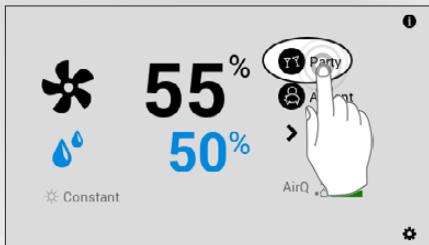

Possible occasion and function



You have guests in the evening.


- Operation with the specified air quantity until the end of the desired time period (duration)



You leave home in the afternoon and will only come back late in the evening.

- Reduced ventilation until the end of the specified time period (duration)

Adjust the duration and air quantity using (+/-) or by entering directly (tap the value) and confirm with OK.

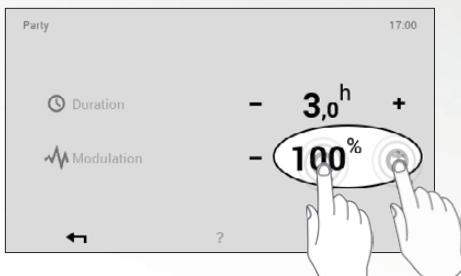


Notice

"Constant" basic program:

This ventilation program set ex works automatically regulates operation to the set air flow rate. If the air humidity increases over the set value, then the air quantity is increased. Built-in air quality sensors also override the required air quantity. (However, the air quantity *display* remains at the set value)

You set the individual day programs / switching cycles in the same way as the heating times, which are described in the *TopTronic® E control module comfort* and *comfort plus* instructions.

"Party" program active.

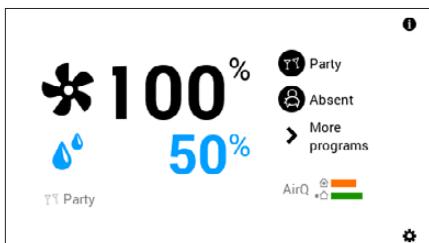

Main menu overview

